


Clean glass
every 2 months to prevent the risk of fire.
Hand wash or clean in a dishwasher using a
neutral detergent. If washing in the dishwa-
sher, possible discoloration of the filters does
not in any way compromise their functioning.

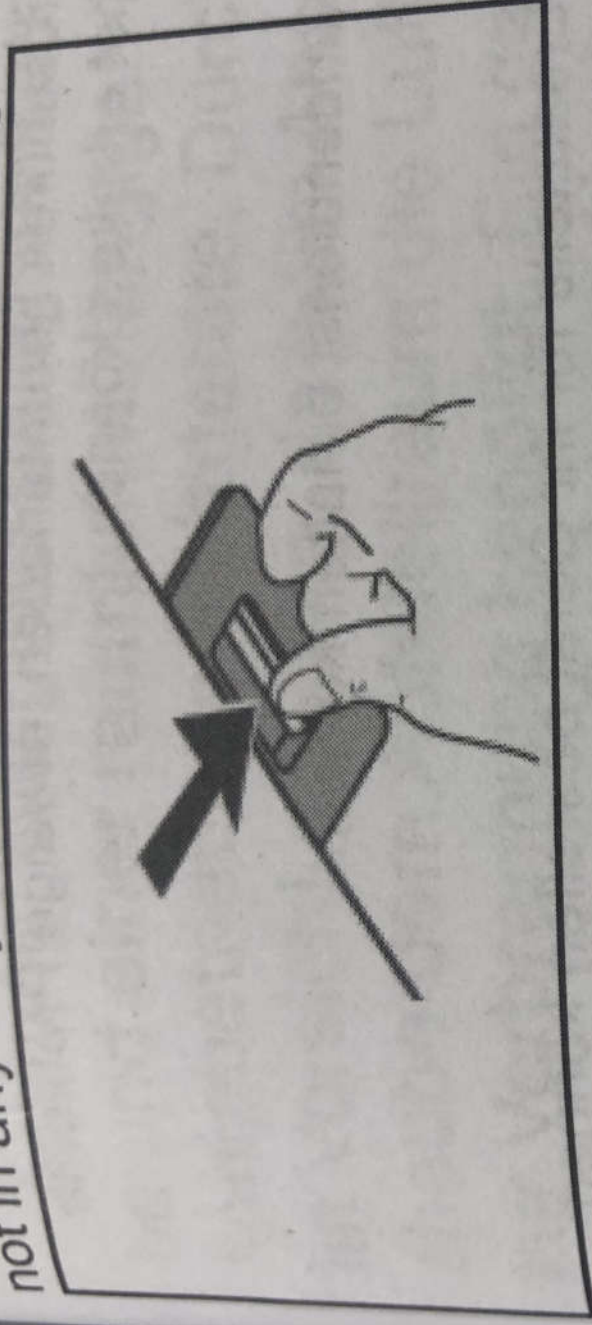

The activated charcoal filter is not washable and cannot be regenerated, and must be replaced approximately every 4 months of operation, or more frequently for particularly heavy usage.

