



General Arrangement: Vertical Installation

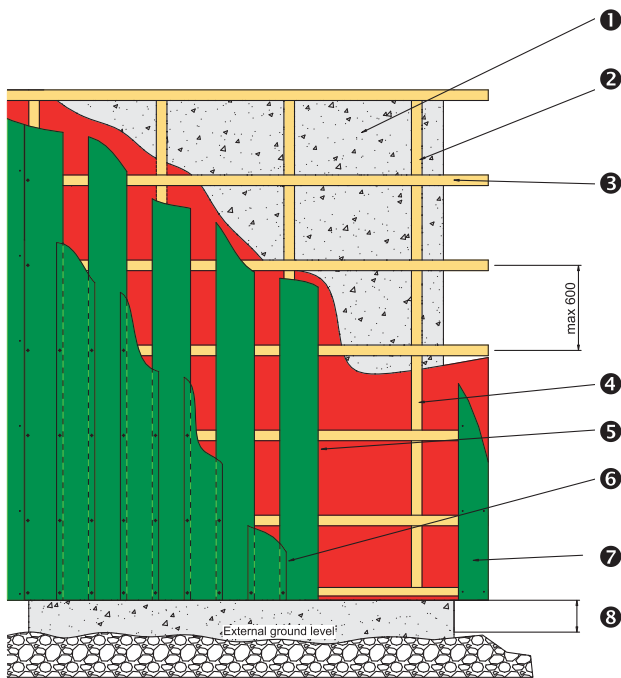

- ❶ Timber or masonry wall
- ❷ Vertically installed timber or steel framing battens set off structural wall face
- ❸ Horizontally installed timber or steel framing battens
- ❹ Install framing to comply with required wind loading (refer to table page 20) and provide sufficient framing for HardieTrim® NT3® profile
- ❺ Breather membrane under framing
- ❻ Vertically installed HardiePlank® cladding – 1st layer
- ❼ Vertically installed HardieTrim NT3 profile
- ❽ Minimum 150mm as per building regulations

Overlap Detail: Vertical Installation

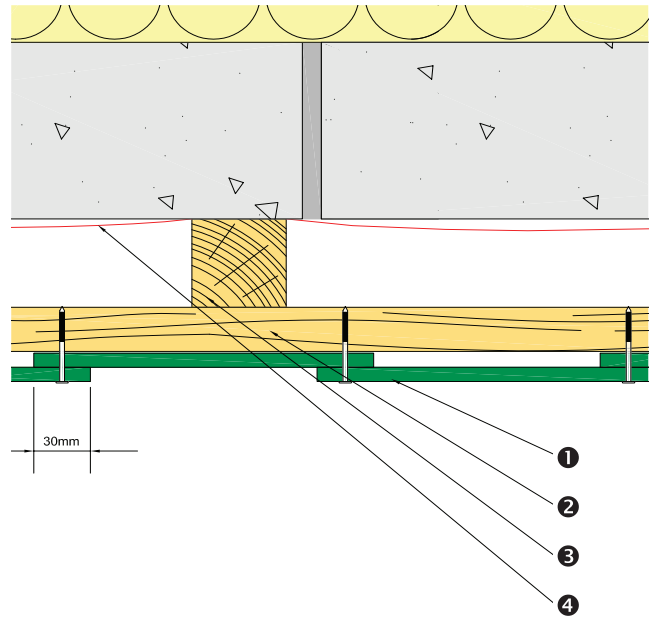

- ❶ HardiePlank® cladding
- ❷ 50×50mm horizontal timber batten
- ❸ 50×50mm vertical timber batten
- ❹ Breather membrane