


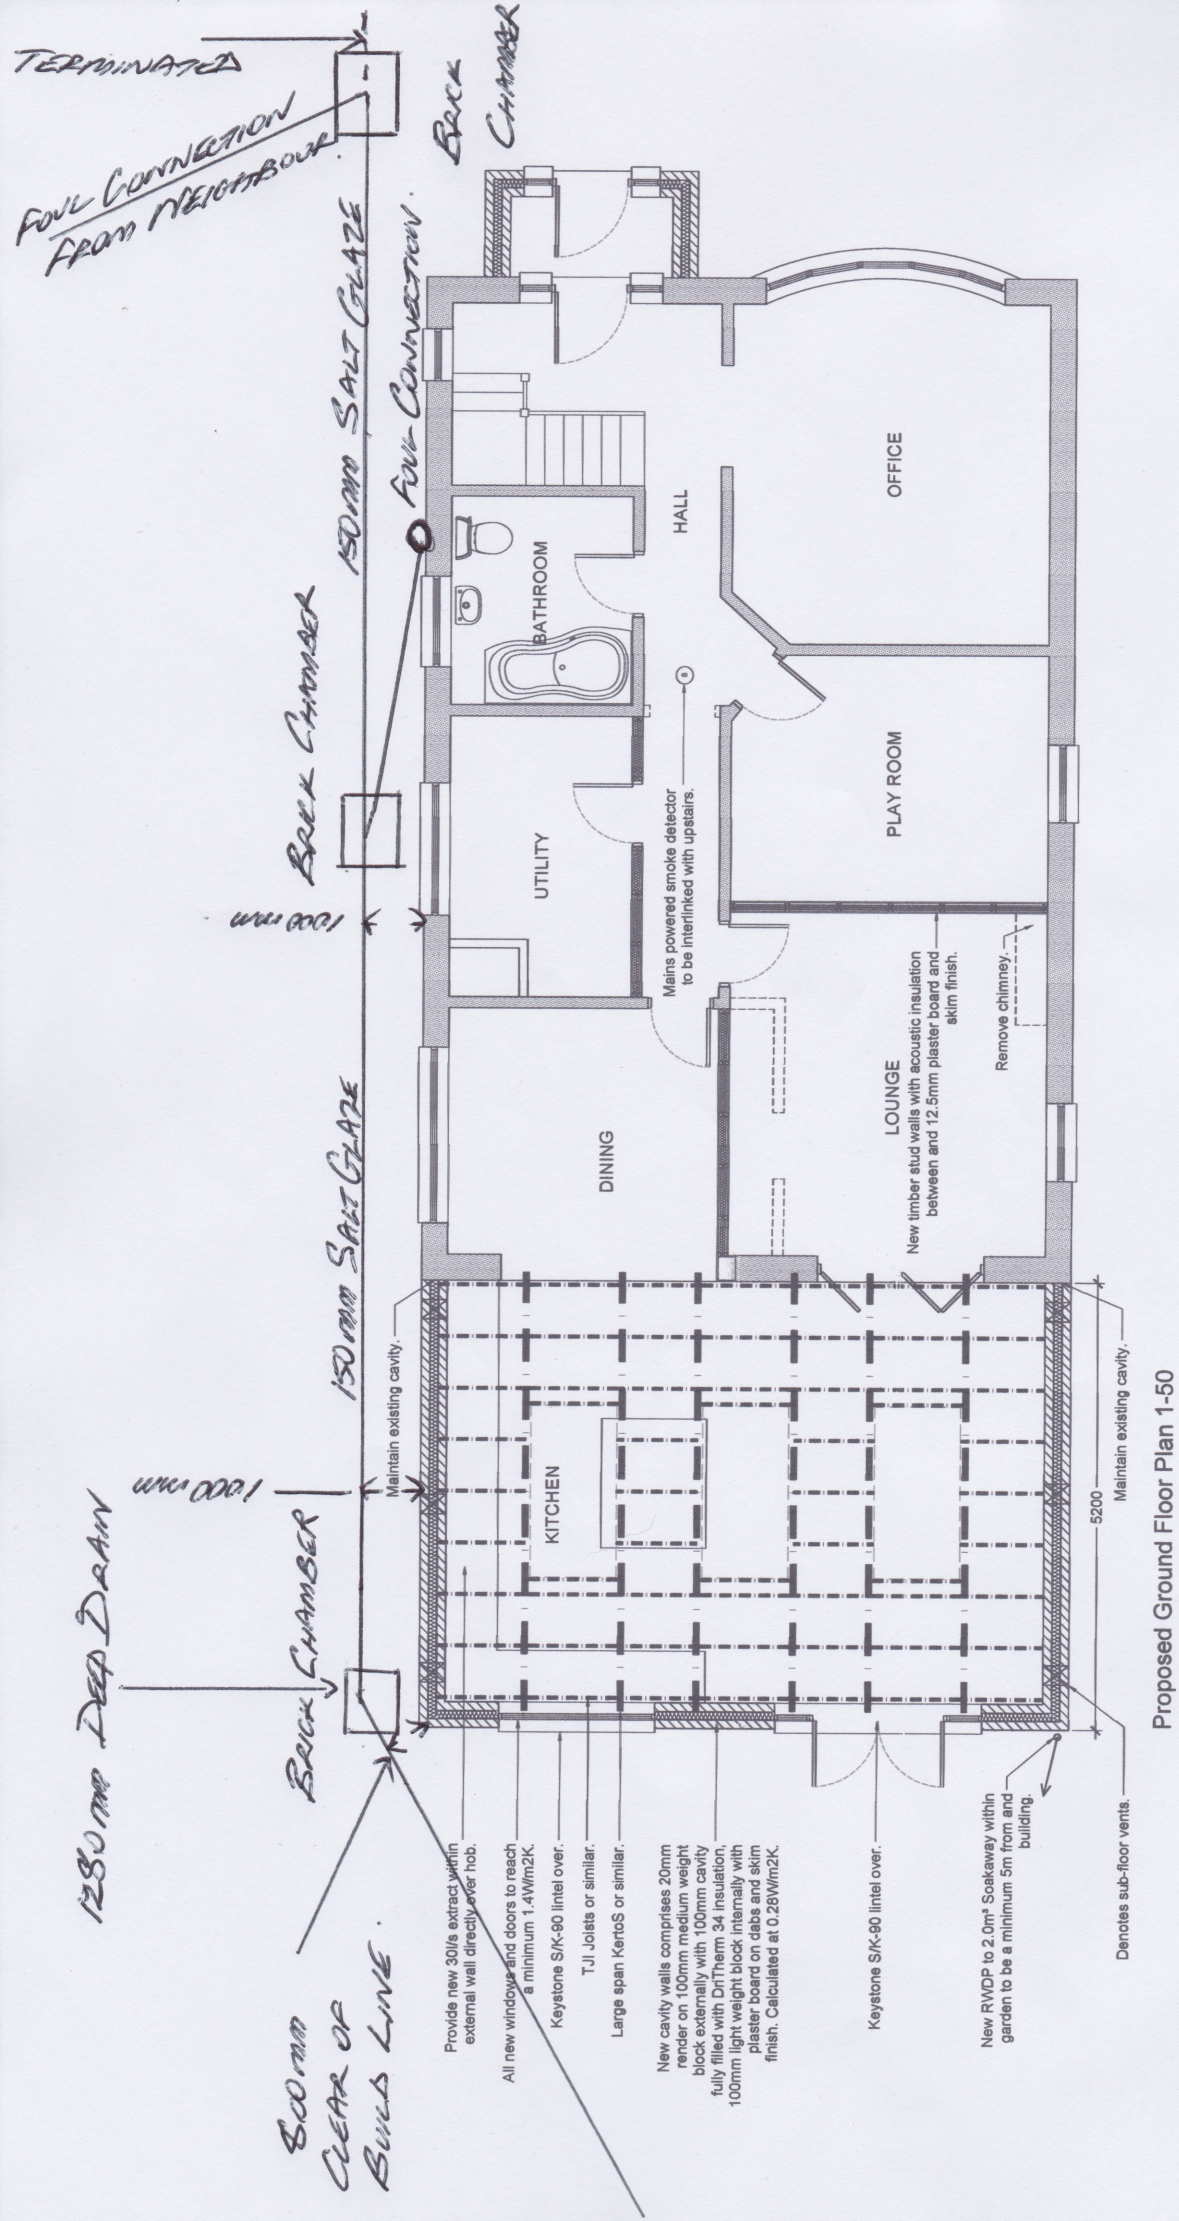

NO OVERBUND REQUIRED.

FOUNDATIONS HAVE DUG MIN 150mm BELOW PIPE INVERT. FOR EXTENSION.

DRAIN 800mm CLEAR OF DRAIN FOR SINGLE STOREY EXTENSION.

EXISTING HOUSE 900-1000mm CLEAR OF DRAIN LINE.

NO PILE FOUNDATIONS TO BE USED.

NB: DRAIN IS NO LONGER USED AS A STORM DRAIN. SURFACE WATER DISCONTINUED IT IN THE 1990'S