Figure 3: Typical detail of 'no-dig' surfacing

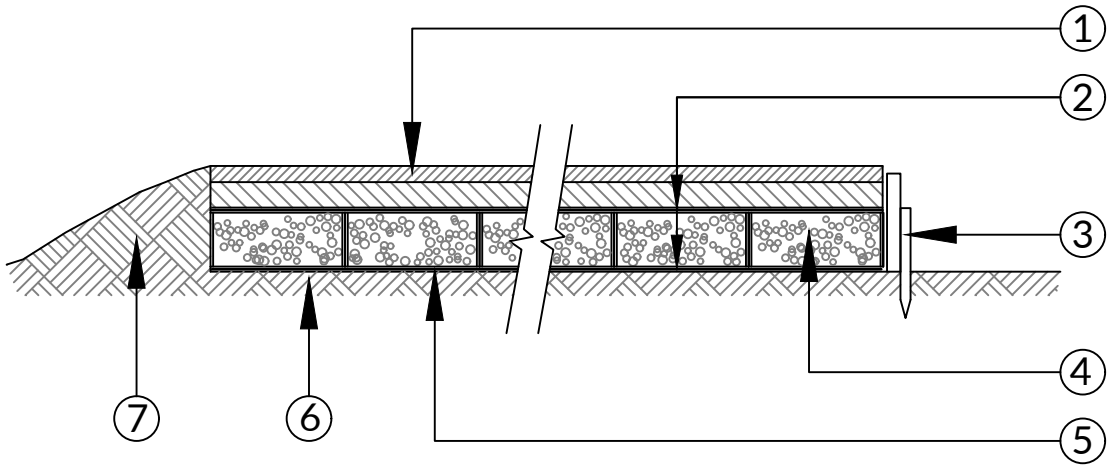

1. Surface material to engineer's specifications
2. Geotextile separation fabric as specified by engineers
3. Treated timber edging if required (sleepers can be used for a more robust edge)
4. 40/20mm clean angular stone
5. Cellular confinement system to engineer's specification and depth
6. Existing ground levels retained (no excavation)
7. Soil fillet can be used at edges

© Keen Consultants