
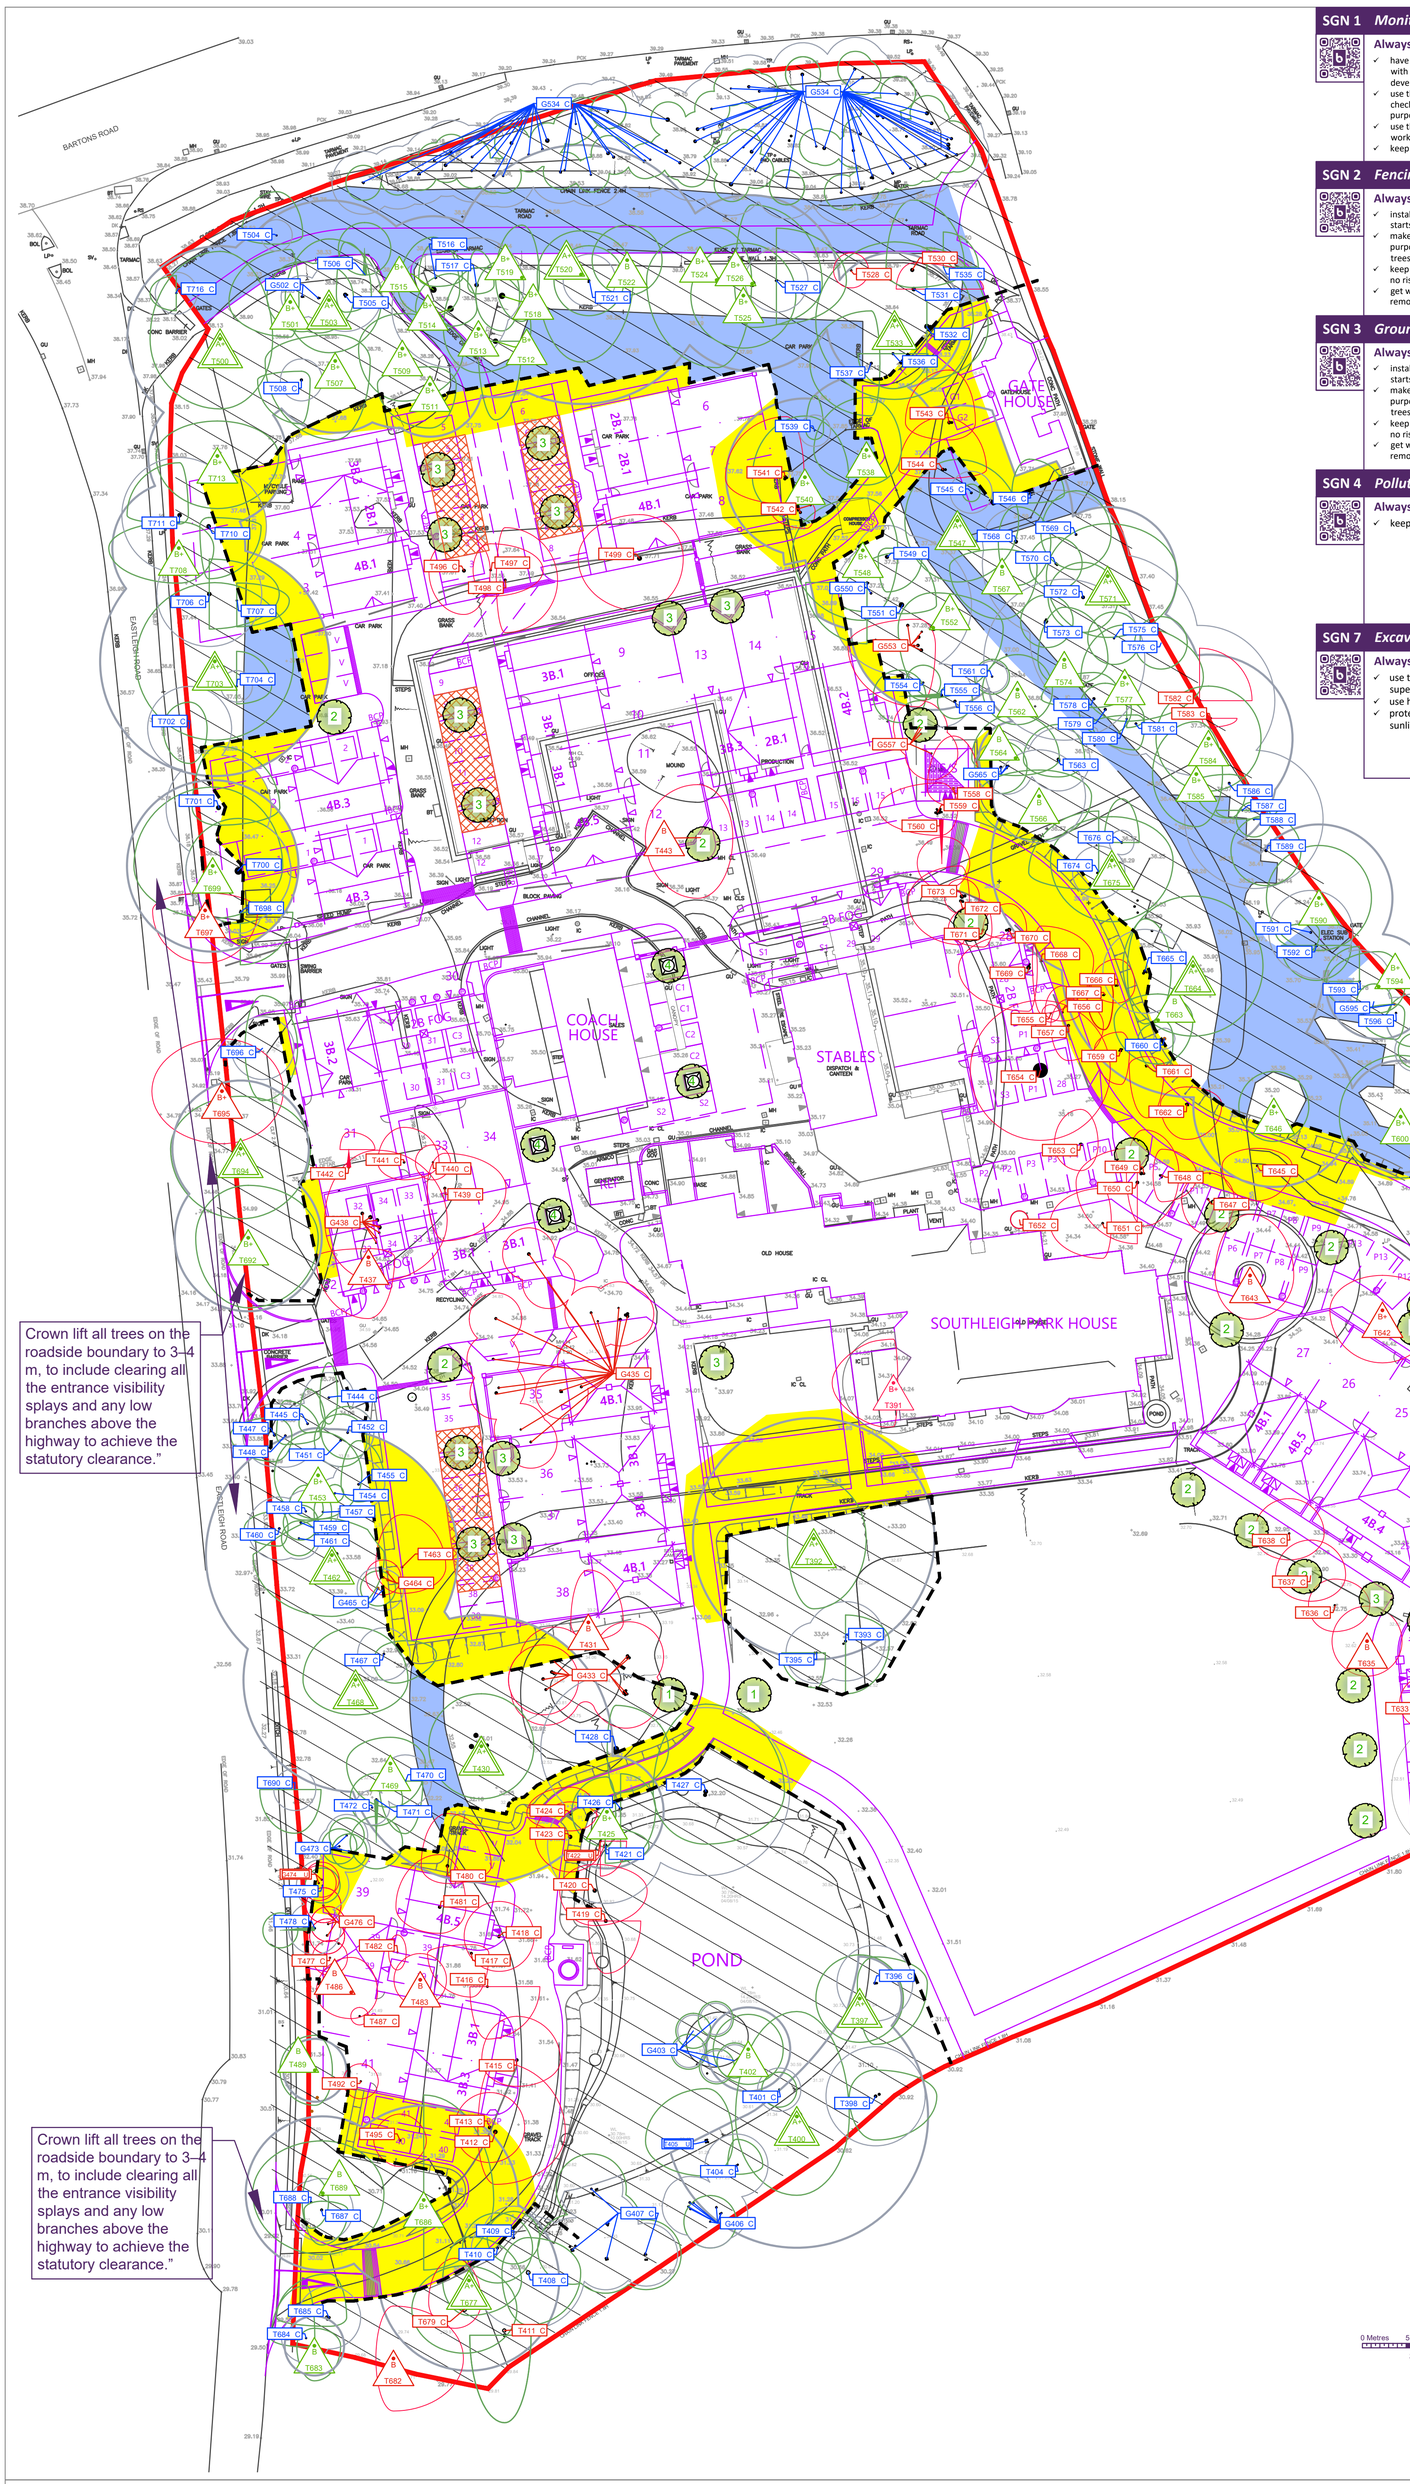


SGN 1 Monitoring tree protection

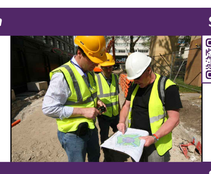

Always:

- ✓ have a pre-commencement meeting with the tree consultant before development starts
- ✓ use the tree consultant to regularly check that protection remains fit for purpose
- ✓ use the tree consultant to supervise work in RPAs
- ✓ keep a written record of supervision

SGN 2 Fencing protected trees



Always:

- ✓ install protection before development starts
- ✓ make sure protection is fit for purpose, i.e. it prevents damage to trees and soil
- ✓ keep protection in place until there is no risk to trees
- ✓ get written permission to move or remove any protection

SGN 3 Ground protection



Always:

- ✓ install protection before development starts
- ✓ make sure protection is fit for purpose, i.e. it prevents damage to trees and soil
- ✓ keep protection in place until there is no risk to trees
- ✓ get written permission to move or remove any protection

SGN 4 Pollution control



Always:

- ✓ keep toxic products away from RPAs

SGN 7 Excavating in RPAs



Always:

- ✓ use the tree consultant to supervise work in RPAs
- ✓ use hand tools to dig in RPAs
- ✓ protect exposed roots from sunlight and drying out

SGN 8 Removing surfacing and structures in RPAs



Always:

- ✓ have a pre-commencement meeting with the tree consultant before development starts
- ✓ use the tree consultant to supervise work in RPAs
- ✓ minimise damage to roots and disturbance to soil in RPAs

SGN 9 Installing/upgrading surfacing in RPAs



Always:

- ✓ use the tree consultant to supervise work in RPAs
- ✓ minimise damage to roots and disturbance to soil in RPAs
- ✓ minimise excavation when installing or upgrading surfacing in RPAs

SGN 10 Installing structures in RPAs



Always:

- ✓ use the tree consultant to supervise work in RPAs
- ✓ hand-dig pile, pad, or post locations down to at least 60cm
- ✓ protect RPAs from contamination from poured wet concrete

SGN 11 Installing services in RPAs



Always:

- ✓ use the tree consultant to supervise work in RPAs
- ✓ select the least damaging option when installing services, so prioritise trenchless, over broken trench over continuous trench
- ✓ hand-dig trenches if trenchless is not feasible

SGN 12 Landscaping in RPAs



Always:

- ✓ use the tree consultant to supervise work in RPAs
- ✓ avoid raising ground levels within 1m of the trunks of retained trees

How to use plan

More detailed guidance on each Site Guidance Note (SGN) can be found in a printed hard copy compilation of all the SGNs, **Manual for Managing Trees On Development Sites version 3.0**, issued to the Site Manager at the pre-commencement site meeting (**Note:** This should be retained on site throughout the duration of works). Additionally, an electronic pdf compilation of all the SGNs, was submitted with this drawing to the local planning authority and the client. Alternatively, a pdf of each SGN can be downloaded by:

1. clicking the image links in the electronic pdf version of this plan;
2. holding a mobile phone QR (Quick Response) code reader over the QR code in the paper version of this plan; or,
3. visiting our website at https://www.barrelltreecare.co.uk/resources/technical-guidance

Tree removals

Location of trees, categorisation & removals

Southleigh Park House, Quantell Snell, Eastleigh Road, Havant, Hampshire PO9 2PE

Barrell Plan Ref: 20122-23

Client Plan Refs:
Topo (2020-07-08) 6288
Layout (2025-02-14) BARG230130_SL01_L.dwg

Permission is granted to scale from this drawing for Local Authority Planning Approval purposes relating to tree protection measures only. Where applicable this drawing is to be read in conjunction with the arboricultural report. This drawing is the copyright of Barrell Tree Consultancy 2025 ©

This drawing to be reproduced in colour only.

www.barrelltreecare.co.uk

- BS category A+ Trees of high quality
- BS category B+ Trees of moderate quality
- BS category B Trees of moderate quality
- BS category C Trees of low quality
- BS category U Trees unsuitable for retention
- Trees to be removed
- Proposed layout
- Estimated tree positions not included on original land survey and/or adjusted crown spreads
- Protective barrier/fencing
- Construction exclusion zone (CEZ)
- Precautionary areas outside the protective fencing
- Precautionary areas inside the protective fencing
- Extent of soil cell installations
- Root protection area (RPA) boundaries for category A+/A and B+/B trees
- Root protection area (RPA) boundaries for category C trees
- Large trees with a typical potential radial crown spread of at least 5-6 m and sometimes up to 10 m
- Medium to large trees with a typically narrow potential radial crown spread of up to about 4-5 m
- Small to medium trees with a typical potential radial crown spread of about 3-4 m
- Trees planted in planters

Tree No	Species	Category	Tree Works	RPA radius (m)
All retained trees			Carry out safety check and lift over site to 3–4 m as necessary.	
T391	Magnolia	B+	Fell for development	5.8
T392	Oak	A+		13.8
T393	Birch	C		4.5
T395	Birch	C		3.5
T396	Ash	C		4.3
T397	Beech	A+		4.8
T398	Birch	C		5.7
T400	Oak	A+		15.0
T401	Goat willow	C		2.5
T402	Yew	B		4.8
G403	Birch	C		1.8
T404	Yew	C		3.6
T405	Goat willow	U		4.4
G406	Portuguese laurel	C		3.0
G407	Portuguese laurel	C		3.6
T408	Oak	C		6.5
T409	Portuguese laurel	C		3.6
T410	Portuguese laurel	C		3.0
T411	Ash	C	Fell for development	8.5
T412	Ash	C	Fell for development	5.8
T413	Portuguese laurel	C	Fell for development	3.0
T415	Goat willow	C	Fell for development	4.8
T416	Goat willow	C	Fell for development	3.0
T417	Ash	C	Fell for development	3.0
T418	Ash	C	Fell for development	3.6
T419	Ash	C	Fell for development	4.8
T420	Ash	C	Fell for development	6.0
T421	Oak	C		6.6
T422	Ash	U	Fell for management	3.0
T423	Portuguese laurel	C	Fell for management	6.0
T424	Ash	C	Fell for development	5.4
T425	Oak	B+		6.5
T426	Ash	C		4.8
T427	Beech	C		9.6
T428	Scots pine	C		8.6
T430	Coast redwood	A+		15.0
T431	Holly	B	Fell for development	5.8
G433	Laurel	C	Fell for management	3.0
G435	Portuguese laurel	C	Fell for development	3.0
T437	Oak	B	Fell for development	8.4
G438	Leyland cypress	C	Fell for development	6.0
T439	Oak	C	Fell for development	4.2
T440	Ash	C	Fell for development	1.8
T441	Horse chestnut	C	Fell for development	2.4
T442	Ash	C	Fell for development	2.4
T443	Cherry	B	Fell for development	8.4
T444	Birch	C		2.9
T445	Cherry	C		2.4
T447	Ash	C		3.6
T448	Ash	C		3.6
T451	Ash	C		3.0
T452	Ash	C		3.0
T453	Holly	B+		5.4
T454	Cherry	C		1.8

Tree No	Species	Category	Tree Works	RPA radius (m)
T455	Hornbeam	C		3.0
T457	Ash	C		1.8
T458	Ash	C		2.4
T459	Birch	C		3.0
T460	Birch	C		3.6
T461	Birch	C		2.4
T462	Yew	A+		14.4
T463	Acacia	C	Fell for development	3.6
G464	Hornbeam	C	Fell for development	2.4
G465	Ash	C		2.4
T467	Birch	C		3.0
T468	Yew	A+		12.8
T469	Acacia	B		5.0
T470	Birch	C		3.0
T471	Birch	C		3.0
T472	Beech	C		2.0
G473	Cherry	C		2.4
G474	Ash	U	Fell for management	1.8
T475	Birch	C		3.0
G476	Acacia	C	Fell for development	1.8
T477	Birch	C	Fell for development	2.4
T478	Birch	C		3.0
T480	Acacia	C	Fell for development	4.2
T481	Ash	C	Fell for development	4.7
T482	Ash	C	Fell for development	2.4
T483	Sweet chestnut	B	Fell for development	3.6
T486	Cherry	B	Fell for development	3.2
T487	Cherry	C	Fell for development	1.2
T489	Sweet chestnut	B		3.6
T492	Ash	C	Fell for development	1.8
T495	Birch	C	Fell for development	2.9
T496	Weeping willow	C	Fell for development	5.3
T497	Birch	C	Fell for development	2.9
T498	Crab	C	Fell for development	4.8
T499	Weeping willow	C	Fell for development	6.6
T500	Oak	A+		10.6
T501	Oak	B+		8.8
G502	Holly	C		2.4
T503	Oak	A+		11.4
T504	Plum	C		1.8
T505	Holly	C		4.2
T506	Beech	C		1.2
T507	Beech	B+		8.2
T508	Holly	C		2.4
T509	Oak	B+		9.1
T511	Holly	B+		6.0
T512	Oak	B+		6.4
T513	Yew	B+		6.7
T514	Oak	B+		6.7
T515	Oak	B+		8.4
T516	Holly	C		1.7
T517	Oak	C		5.4
T518	Oak	B+		7.2
T519	Oak	B+		7.8
T520	Oak	A+		14.8
T521	Holly	C		3.0
T522	Beech	B		2.6
T524	Oak	B+		8.0
T525	Yew	B+		7.2
T526	Oak	B+		10.0
T527	Beech	C		3.6

Tree No	Species	Category	Tree Works	RPA radius (m)
T528	Sycamore	C	Fell for development	2.4
T530	Beech	C	Fell for development	5.2
T531	Yew	C		5.4
T532	Yew	C		6.6
T533	Beech	A+		7.8
G534	Ash, beech, sycamore	C		3.6
T535	Sycamore	C		1.8
T536	Beech	C		3.0
T537	Beech	C		3.6
T538	Yew	B+		8.6
T539	Sycamore	C		1.8
T540	Yew	B+		9.0
T541	Sycamore	C	Fell for development	4.9
T542	Sycamore	C	Fell for development	3.0
T543	Pittosporum	C	Fell for development	4.8
T544	Bay	C	Fell for development	5.5
T545	Bay	C		2.4
T546	Bay	C		3.4
T547	Yew	A+		13.2
T548	Sycamore	B+		9.1
T549	Birch	C		3.6
G550	Yew	C		1.8
T551	Yew	C		8.0
T552	Yew	B+		9.4
G553	Sycamore	C	Fell for development	4.2
T554	Sycamore	C		1.8
T555	Yew	C		3.6
T556	Unknown	C		
G557	Sycamore	C	Fell for development	2.4
T558	Sycamore	C	Fell for development	3.6
T559	Irish yew	C	Fell for development	5.7
T560	Field maple	C	Fell for development	3.6
T561	Holly	C		1.8
T562	Sycamore	B		3.2
T563	Holly	C		3.6
T564	Sycamore	B		4.2
G565	Holly	C		3.0
T566	Oak	B		5.3
T567	Sycamore	B		3.8
T568	Yew	C		4.8
T569	Sycamore	C		3.6
T570	Sycamore	C		3.7
T571	Sycamore	A+		7.9
T572	Portuguese laurel	C		3.6
T573	Irish yew	C		3.4
T574	Sycamore	B		3.7
T575	Sycamore	C		2.4
T576	Sycamore	C		3.0
T577	Yew	B+		8.6
T578	Sycamore	C		3.6
T579	Sycamore	C		3.6
T580	Sycamore	C		2.4
T581	Sycamore	C		2.4
T582	Sycamore	C	Fell for development	3.0
T583	Sycamore	C	Fell for development	2.4
T584	Oak	B+		9.6

Tree No	Species	Category	Tree Works	RPA radius (m)
T585	Yew	B+		9.2
T586	Cherry	C		2.4
T587	Sycamore	C		2.4
T588	Oak	C		1.8
T589	Cherry	C		3.0
T590	Lime	B+		8.4
T591	Birch	C		2.4
T592	Birch	C		3.8
T593	Oak	C		3.6
T594	Yew	B+		6.0
G595	Beech	C		1.8
T596	Ash	C		1.8
T597	Ash	C		3.0
T598	Birch	C		2.4
T600	Oak	B+		6.4
T601	Holly	C		3.6
T602	Beech	C		3.6
T603	Oak	B+		7.0
G604	Portuguese laurel	C	Fell for development	3.6
T606	Holly	C		2.4
T607	Sycamore	C		3.0
T608	Hornbeam	C		2.4
T610	Rowan	C		1.8
T612	Sycamore	A+		6.0
T613	Lime	C		4.4
T616	Sycamore	C	Fell for development	1.8
T617	Ash	C	Fell for development	3.0
T618	Birch	C	Fell for development	3.0
T619	Birch	C	Fell for development	2.4
T620	Birch	C	Fell for development	2.4
T621	Birch	C	Fell for development	2.4
T622	Scots pine	C	Fell for development	1.8
T623	Birch	C	Fell for development	2.4
T625	Birch	C	Fell for development	4.2
T626	Birch	C	Fell for development	3.0
T627	Birch	C		2.4
T629	Sycamore	A+		8.0
G630	Oak, birch, sycamore	C	Fell for development	3.6
T632	Oak	B	Fell for development	5.2
T633	Birch	C	Fell for development	2.4
T635	Atlantic cedar	B	Fell for development	5.3
T636	Persian ironwood	C	Fell for development	1.5
T637	Persian ironwood	C	Fell for development	1.5
T638	Persian ironwood	C	Fell for development	2.1
T639	Oak	A+		11.8
G640	Birch	C	Fell for development	2.4
T641	Birch	C	Fell for development	2.4
T642	Oak	B+	Fell for development	6.6
T643	Catalpa	B	Fell for development	4.1
T645	Oak	C	Fell for development	2.6
T646	Mountain redwood	B+		9.2
T647	Hazel	C	Fell for development	1.7
T648	Holly	C	Fell for development	2.9
T649	Beech	C	Fell for development	4.1
T650	Turkey oak	C	Fell for development	4.8
T651	Acacia	C	Fell for development	3.2
T652	Hazel	C	Fell for development	1.1
T653	Hazel	C	Fell for development	2.3
T654	Mountain redwood	C	Fell for development	15.0

Tree No	Species	Category	Tree Works	RPA radius (m)
T655	Sycamore	C	Fell for development	1.8
T656	Holly	C	Fell for development	1.8
T657	Sycamore	C	Fell for development	4.2
T659	Camelia sp	C	Fell for development	3.4
T660	Holly	C		1.2
T661	Hazel	C	Fell for development	1.2
T662	Hazel	C	Fell for development	1.9
T663	Birch	B		5.2
T664	Coast redwood	A+		15.0
T665	Holly	C		4.8
T666	Holly	C	Fell for development	3.0
T667	Hazel	C	Fell for development	1.8
T668	Sycamore	C	Fell for development	3.6
T669	Sycamore	C	Fell for development	4.2
T670	Lawson cypress	C	Fell for development	3.0
T671	Hazel	C	Fell for development	1.5
T672	Sycamore	C	Fell for development	4.2
T673	Lawson cypress	C	Fell for development	5.4
T674	Sycamore	C		3.0
T675	Oak	A+		13.8
T676	Cherry	C		1.4
T677	Coast redwood	A+		10.3
T679	Ash	C	Fell for development	6.7
T682	Beech	B	Fell for development	6.5
T683	Cherry	B		3.4
T684	Ash	C		2.8
T685	Yew	C		3.6
T686	Deodar cedar	B+		10.8
T687	Yew	C		3.6
T688	Holly	C		2.4
T689	Oak	B		8.8
T690	Acacia	C		2.4
T692	Oak	B+		8.4
T694	Horse chestnut	A+		7.8
T695	Oak	B+		10.8
T696	Ash	C		3.6
T697	Oak	B+		9.8
T698	Ash	C		2.4
T699	Oak	B+		9.8
T700	Yew	C		6.0
T701	Oak	C		6.0
T702	Oak	C		4.8
T703	Oak	A+		13.1
T704	Ash	C		1.8
T706	Oak	C		6.0
T707	Beech	C		1.8
T708	Oak	B+		7.6
T710	Oak	C		6.6
T711	Oak	C		6.6
T713	Yew	B+		7.9
T716	Hawthorn	C		2.4