PERMIT

Installation Details for *the* Replica Rooflight™

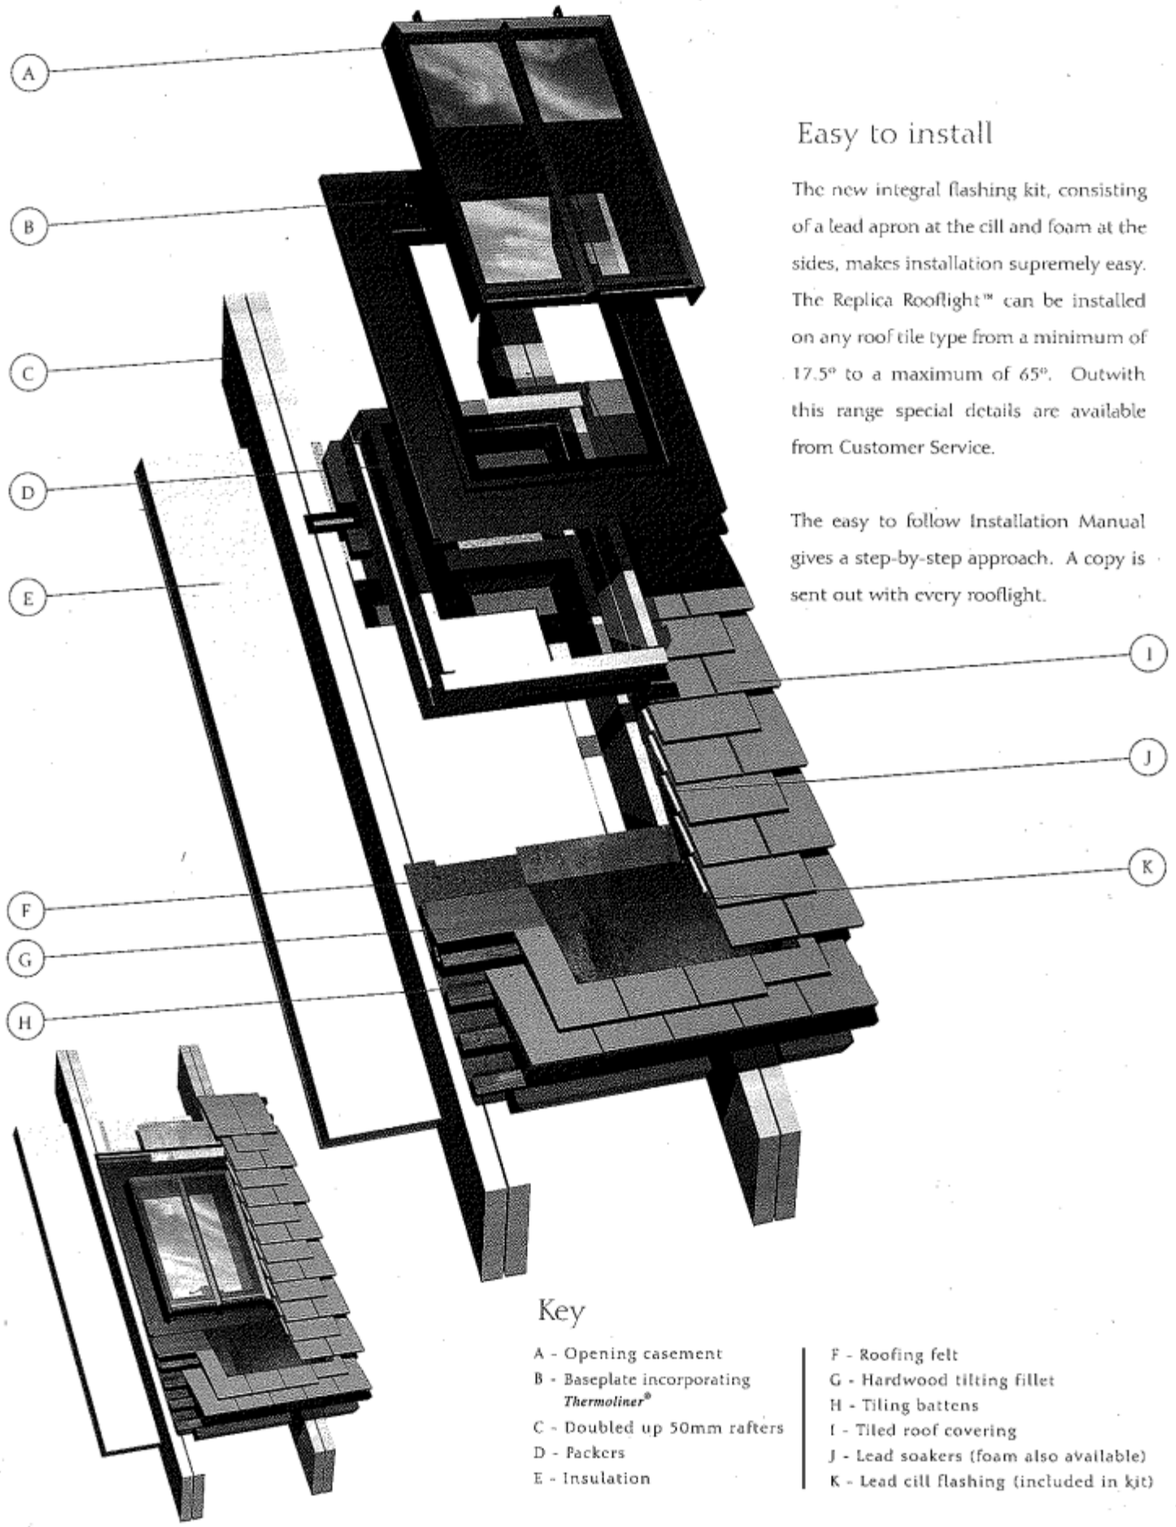

Easy to install

The new integral flashing kit, consisting of a lead apron at the cill and foam at the sides, makes installation supremely easy. The Replica Rooflight™ can be installed on any roof tile type from a minimum of 17.5° to a maximum of 65°. Outwith this range special details are available from Customer Service.

The easy to follow Installation Manual gives a step-by-step approach. A copy is sent out with every rooflight.

Key

A - Opening casement
B - Baseplate incorporating *Thermoliner*®
C - Doubled up 50mm rafters
D - Packers
E - Insulation
F - Roofing felt
G - Hardwood tilting fillet
H - Tiling battens
I - Tiled roof covering
J - Lead soakers (foam also available)
K - Lead cill flashing (included in kit)

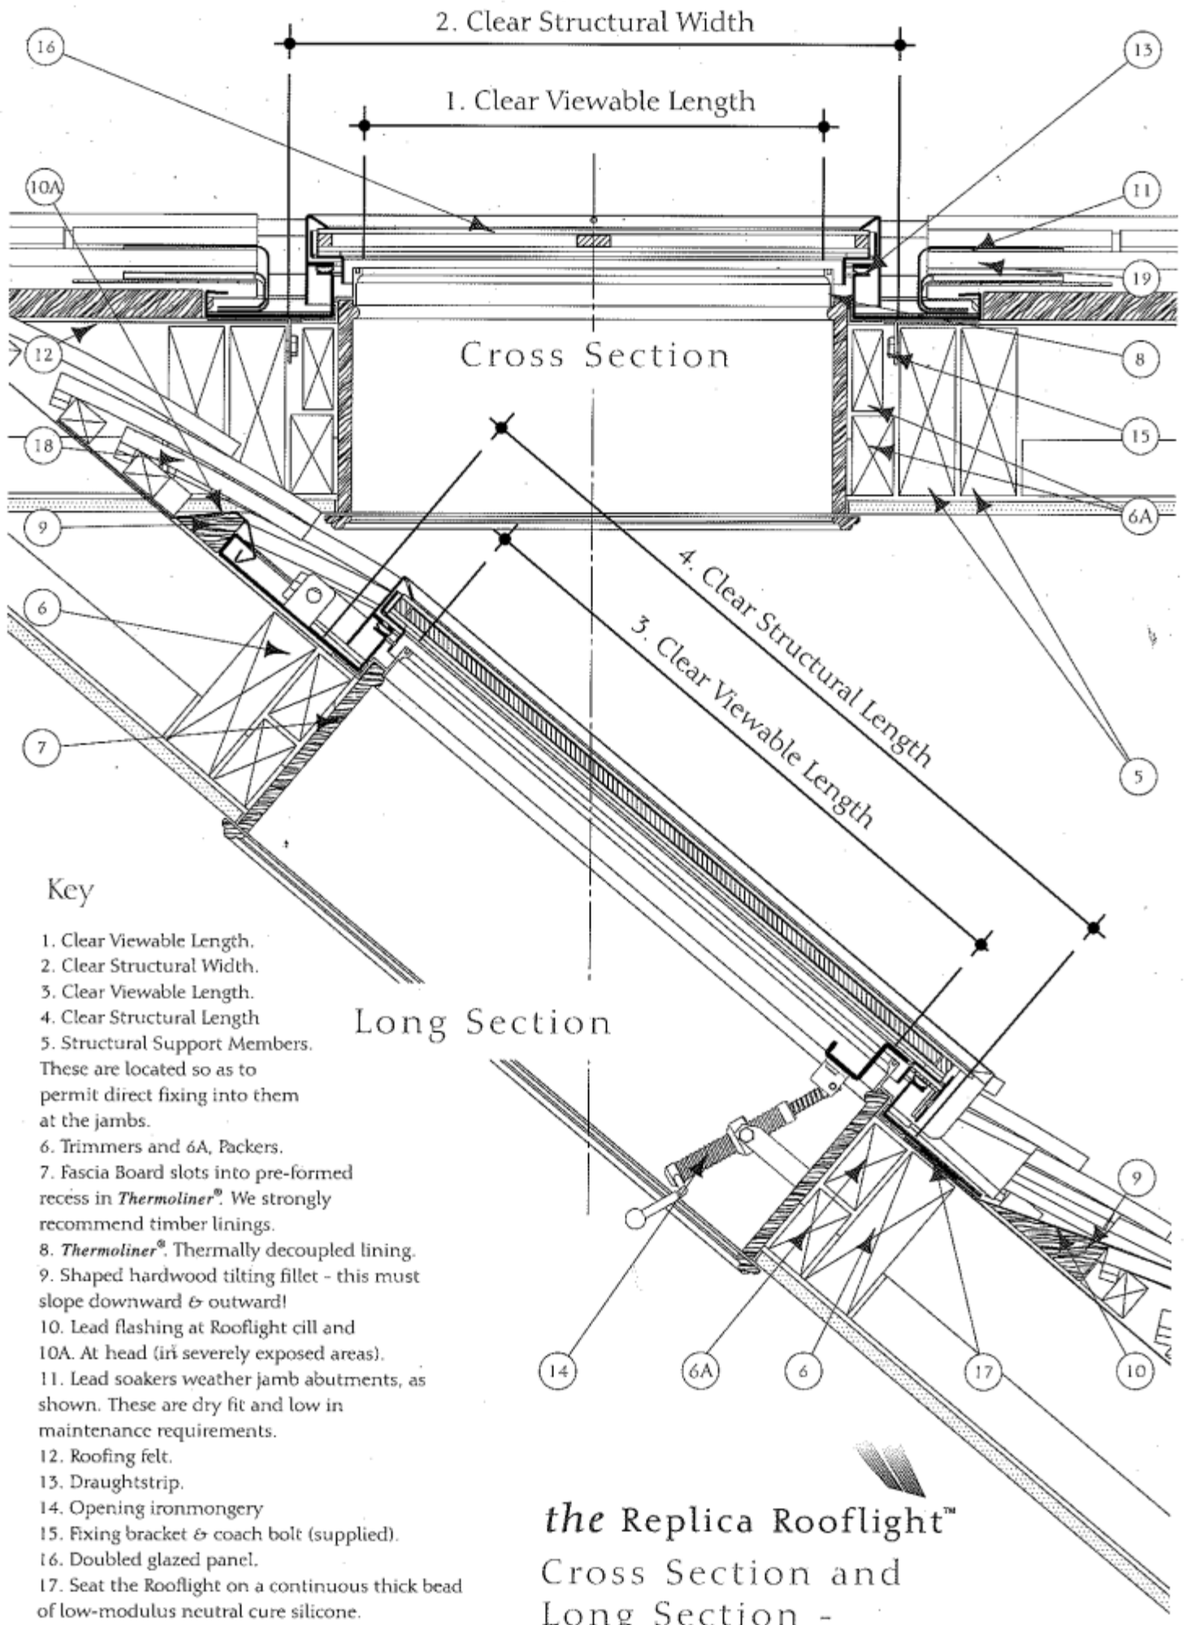

Key

1. Clear Viewable Length.
2. Clear Structural Width.
3. Clear Viewable Length.
4. Clear Structural Length
5. Structural Support Members. These are located so as to permit direct fixing into them at the jambs.
6. Trimmers and 6A, Packers.
7. Fascia Board slots into pre-formed recess in *Thermoliner*®. We strongly recommend timber linings.
8. *Thermoliner*®. Thermally decoupled lining.
9. Shaped hardwood tilting fillet - this must slope downward & outward!
10. Lead flashing at Rooflight cill and 10A. At head (in severely exposed areas).
11. Lead soakers weather jamb abutments, as shown. These are dry fit and low in maintenance requirements.
12. Roofing felt.
13. Draughtstrip.
14. Opening ironmongery
15. Fixing bracket & coach bolt (supplied).
16. Doubled glazed panel.
17. Seat the Rooflight on a continuous thick bead of low-modulus neutral cure silicone.
18. Eaves/Undercloaking tile.
19. Jamb tiles may require cutting to course and fit.

the Replica Rooflight™

Cross Section and Long Section - Clay tile roof covering

Note: Designers are advised to check their own details for compliance with all applicable Local Authority by-laws, Acts of Parliament and British Standards Codes of Practice.